
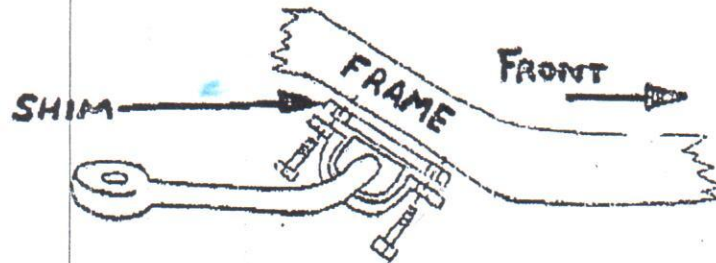


FRONT SWAY-BAR INSTALLATION

FRONT SWAY-BAR INSTALLATION IS THE SAME AS STOCK, EXCEPT AT FRAME BUSHINGS. INSTALL AS SHOWN, ADDING MORE SHIMS FOR CLEARANCE. GENERALLY ONLY ONE PER SIDE IS REQUIRED.

ALL REAR BAR INSTALLATION

JACK UP CAR AND REMOVE REAR WHEELS. PLACE BAR ON TOP OF AXLE HOUSING AND LOOSELY ASSEMBLE AXLE BRACKETS. BE SURE TO REMOVE THE NUT HOLDING BRAKE "T" BLOCK AND LET LINES "FLOAT" FOR NOW.

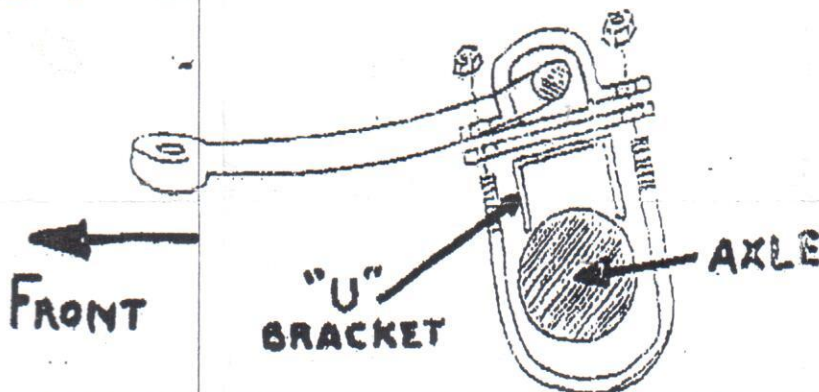

ON PASSENGER SIDE, "U" BRACKET WILL BE PLACED OVER BRAKE LINE TO 'SADDLE' IT. DO NOT LET BRAKE LINE PINCH UNDER BRACKET. POSITION "L" BRACKET ON FRAME AS SHOWN.

