


INSTALLATION INSTRUCTION, HEAT SHIELD/PAD KIT

NOTE 1:

Do not cover holes for
accelerator pedal and
inspection plug.

NOTE 2:

Allow 3/4" space between edge
of mat and wall for kick panel
installation.

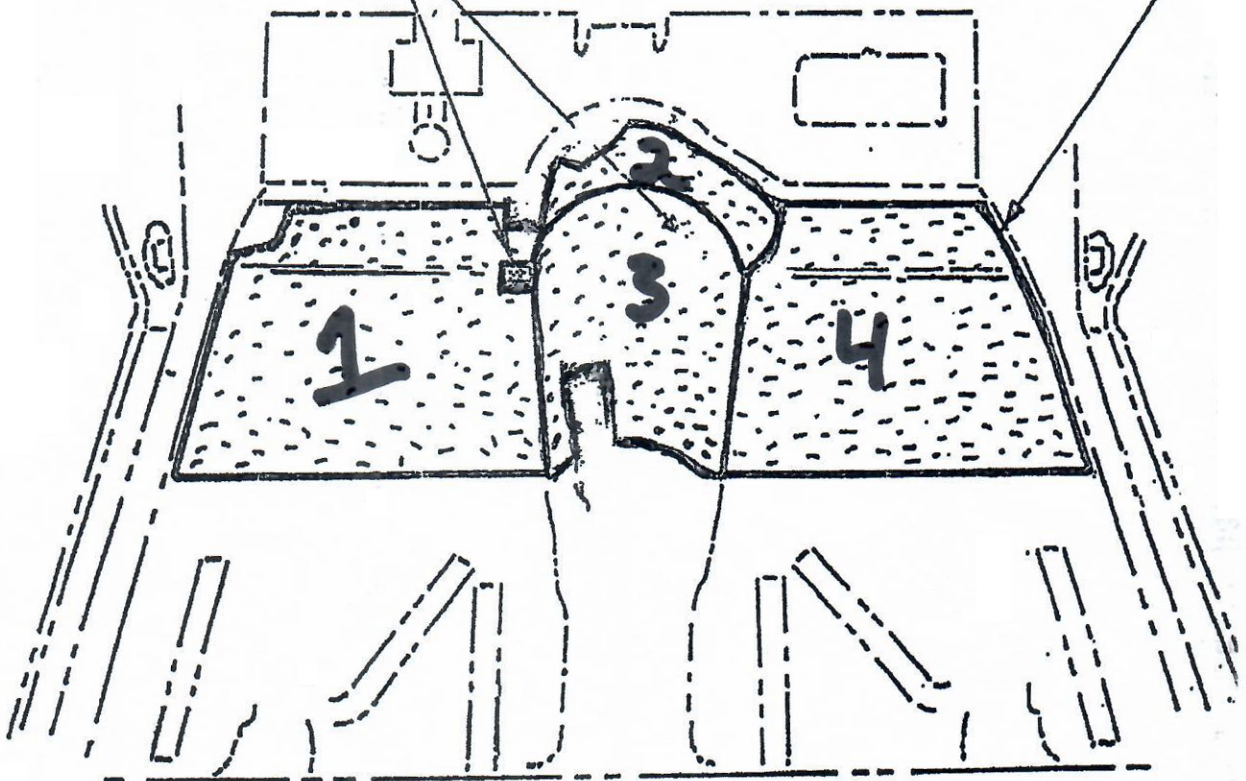

1. Clean area to be covered with heat shield kit.
2. Apply contact cement to foil side of heat shield mats, and to floor area to be covered.
3. Allow cement to dry until tacky to touch.
4. Carefully position pieces of mat in place. See notes above illustration.